


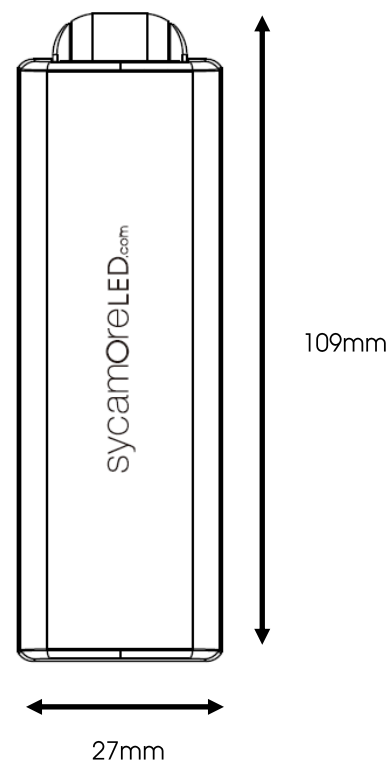

17mm depth



## FEATURES

Magnetic Wireless battery free contact switch to switch lights on and off, so no charging or wires required.

To be used with the Sycamore Kinetic Smart furniture system. When the door is opened the light switches on via a kinetic energy transfer to the receiver or Smart driver

A small amount of kinetic energy is generated by the action of the clicking the switch, which is converted to an electrical signal and sent to the receiver. The amount of energy used is very low, so the switch adheres to strict requirements on low power consumption & helps the environment. Receiver (SY2416) or smart driver (SY8996/SY8999) required.

Part Number	Description
SY2446	Magnetic Wireless contact switch