


Installation instructions : Mini PIR Sensor Switch SY7262

Thank you for purchasing this SycamoreLED.com product. Please make sure instructions are followed carefully prior to and during installation and product is not altered, otherwise warranty may not be valid. For technical support or warranty information please visit www.sycamoreLED.com, or call our dedicated technical helpline +44 (0) 113 2866686.

IMPORTANT—Please read prior to installation

- 1) Please read these instructions carefully before commencing any work
- 2) Please retain these instructions for future reference
- 3) It is strongly recommended that this unit is installed by a qualified electrician in accordance with the IEE wiring regulations and building regulations
- 4) To prevent electrocution switch the power off at the mains supply before installing or maintaining this fitting
- 5) Ensure others cannot restore the electrical supply without your knowledge
- 6) The PSU must be rated 12VDC and be compatible with the pre-wired connector system of this product
- 7) Never exceed the wattage stated

TECHNICAL INFORMATION

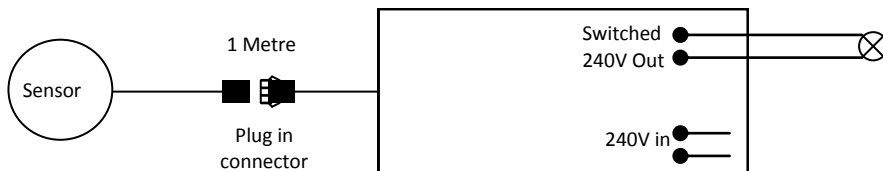

Diameter	Cut Out	Depth	Max Wattage	Voltage	Sensor Range	Time Delay
30mm	25mm	18mm	500W	240V, 50HZ	1—3 Metres max/ 110 degree	30 seconds \pm 5s

This sensor can be used to control LED and Halogen light sources

INSTALLATION

- 1) Please ensure that the selected location for installation of the sensor head is satisfactory for the required activation area
- 2) Drill a suitable hole in the selected surface and install sensor head
- 3) Connect 240V supply to relevant terminals (L & N) on control box
- 4) Connect outgoing switched 240V cable to terminals marked
- 5) Complete lighting installation. Restore power and check activation

