



LED lights plug into the distribution block



Connect power lead into LED driver
FOR CONNECTION TO 12 OR 24VDC ONLY

Part Number

SY7541A Receiver & Remote control
SY7542A Receiver
SY9565 Remote Control

⚠ Receiver Unit Total Max Loadings ⚠
12v — 36W
24v — 72W

BASIC FUNCTIONS

The Master On & Off buttons will turn all lights on all channels on & off. When turned on the Brightness up & down buttons are used to control the brightness of all lights. Select channel (1 to 4) then use the brightness buttons to control only the lights on that channel.

Linking new lights

1. Choose which zone/channel the receiver (& its lights) are to be assigned to
2. Switch off the power to that receiver (turn off power to the driver)
3. Now switch the power back on & within three seconds press the on button for the zone/channel required.
4. When the link operation is successful the lights will slowly blink on/off 3 times.

Unlinking the lights

1. Use the remote to find which channel the lights are assigned to
2. Switch off the power to that receiver (turn off power to the driver)
3. Now switch the power back on & within three seconds press the on button for the zone/channel 5 times
4. When the unlinking operation is successful the lights will quickly blink 10 times

Additional tips

Press & hold the Master On to bring all lights onto full. Press & hold a Zone On button to bring that zones lights to full.

DO NOT CONNECT TO 240VAC