

Installation instructions : Powerbank Portable Floodlight 10W SY8970


Thank you for purchasing this SycamoreLED.com product. Please make sure instructions are followed carefully prior to and during installation and product is not altered, otherwise warranty may not be valid. For technical support or warranty information please visit www.sycamoreLED.com, or call our dedicated technical helpline +44 (0) 113 2866686.

IMPORTANT—Please read prior to installation

- 1) Please read these instructions carefully before commencing any work
- 2) Please retain these instructions for future reference

SPECIFICATION & DIAGRAMS

THE TECHNICAL SPEC...	
Fitting Type	LED 10 Watts
Lumens	700 lm
Battery Capacity	3.7V/4400 mAh
Lighting Time	3hrs for 100% lighting, 6 hrs for 50% lighting, and 15hrs for 20% lighting
Input/Output Voltage	DC5V/2A
CCT	4000k

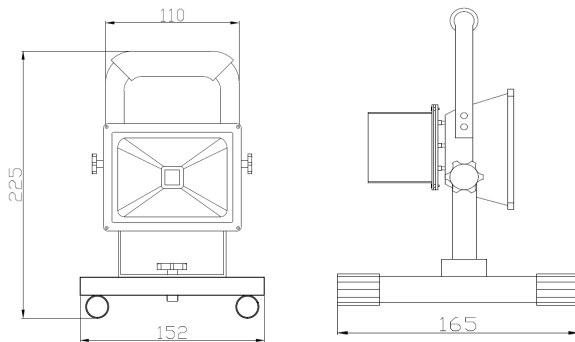

OPERATING INSTRUCTIONS

- 1) On/Off push switch to switch the light.
- 2) 'Gears' Switch changes the brightness of the floodlight.
- 3) Light switches on at 100% brightness
- 4) 1 click – 50% brightness
- 5) 2 clicks – 20% brightness
- 6) 3 Clicks – Red SOS LED
- 7) To charge, plug in supplied micro USB cable to product and USB 2.0 to outlet. When charging, the battery indicator will flash.
- 8) When the product has reached full charge, the battery indicator will be on.