


Installation instructions: Tunable Sirius Tri/Recti Light SY7940TW/7942TW

Thank you for purchasing this SycamoreLED.com product. Please make sure instructions are followed carefully prior to and during installation and product is not altered, otherwise warranty may not be valid. For technical support or warranty information please visit www.sycamoreLED.com, or call our dedicated technical helpline +44 (0) 113 2866686.

IMPORTANT—Please read prior to installation

INSTALLATION

- 1) Please read these instructions carefully before commencing any work
- 2) It is strongly recommended that this unit is installed by a qualified electrician
- 3) To prevent electrocution switch the power off at the mains supply before installing or maintaining this fitting
- 4) Ensure others cannot restore the electrical supply without your knowledge
- 5) The PSU must be rated 12VDC and be compatible with the pre-wired connector system of this product
- 6) Never exceed the wattage stated

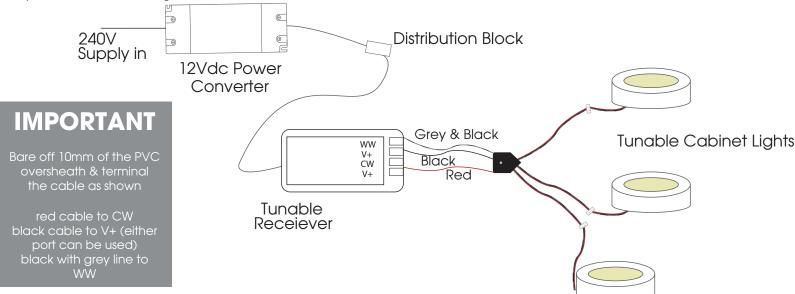

Overview

The fitting is based upon the standard Sirius cabinet light, however within the fitting there are warm and cool white LEDs. When used in conjunction with the 4 zone tunable receiver/remote the colour temperature of the light can be changed from warm-cool white and vice versa.

When purchasing you will need the lights, cable distributor, tunable receiver, remote control and driver.

Installation

Ensure 240v supply is isolated prior to installation.

- 1) Install the driver (see driver for installation)
- 2) Connect the receiver SY7699 to the distribution block on the driver via the connection plug on the receiver
- 3) Wire the cable distributor SY7893 to the receiver (see diagram)
- 4) Plug the lights into the slots on the distributor cable
- 5) Address the receiver to the remote control (see instructions supplied with the receiver/remote)

