

# SYCAMORE


## Installation instructions : SY2426 AL/BL TriGlow Nexa Surfaced / Recessed Cabinet Light

Thank you for purchasing this SycamoreLED.com product. Please make sure instructions are followed carefully prior to and during installation and product is not altered, otherwise warranty may not be valid. For technical support or warranty information please visit [www.sycamoreLED.com](http://www.sycamoreLED.com), or call our dedicated technical helpline +44 (0) 113 2866686.

### IMPORTANT—Please read prior to installation

- 1) Please read these instructions carefully before commencing any work
- 2) It is strongly recommended that this unit is installed by a qualified electrician
- 3) To prevent electrocution switch the power off at the mains supply before installing or maintaining this fitting
- 4) Ensure others cannot restore the electrical supply without your knowledge
- 5) The PSU must be rated 24VDC and be compatible with the pre-wired connector system of this product
- 6) Never exceed the wattage stated

### DIAGRAM

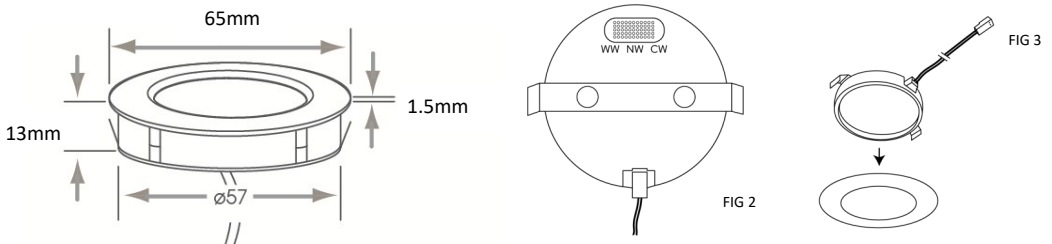

### INSTALLATION—RECESSED

- 1) Cut 57mm hole in suitable surface
- 2) Select desired colour temperature from the toggle switch on the rear - Cool white, Natural white or Warm White , Fig 2
- 3) Route cable in desired location, ensuring that the plug of the light can be connected to the driver (PSU)
- 4) Power lead can be detached for easier installation via the push fit connector on the base of the fitting
- 5) Connect into PSU using fast fit connector
- 6) Insert light in recess

### INSTALLATION—SURFACE

- 1) Fix surface ring in position using screws provided
- 2) Select desired colour temperature from the toggle switch on the rear - Cool white, Natural white or Warm white , Fig 2
- 3) Power lead can be detached for easier installation via the push fit connector on the base of the fitting
- 4) Ensure that cable is located via cut out on spacer
- 5) Connect into PSU using fast fit connector
- 6) Insert light into spacer and check operation

### CARE IN USE

- 1) Please note this fitting has non replaceable electrical components , the front bezel can be removed by unscrewing anti-clockwise and an alternative coloured replaced by screwing back on clockwise. Fig 3
- 2) Light fitting is not dimmable
- 3) Always switch off or disconnect from the mains when cleaning the product.
- 4) We recommend cleaning with a soft dry cloth. Do not use scourers, abrasives or chemical cleaners.