

4 zone RGB+CCT remote

Model No.:SY8763

Product Feature

- 2.4GHz wireless transmitting technology , fast transmitting, stable signal and anti-interference
- Control multi devices at the same time
- Dim color, brightness and mode
- Change color and speed of dynamic mode
- Working with multi controllers (control distance 30m)
- simple magnetic installation
- Control lighting scene freely , for commerical and home lighting scene

 
 


Product Parameter


Product Name: :	4 zone RGB+CCT remote	Working temperature: :	-10~40°C
Model No.:	C5	EMC standard(EMC):	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-3 V2.3.2
Working voltage:	3V(AAA*2PCS)	Security Standard (LVD):	EN 61347-2-11:2001+A1: 2019 EN 61347-1: 2015+A1:2021 EN 62493:2015+A1:2022
Standby consumption:	15μA	Radio equipment (RED):	ETSI EN 300 400 V2.2.1
Transmission:	6dBm	Certification:	CE、EMC、LVD、RED
Protocol:	2.4GHz RF		
Modulation:	GFSK		
Control Distance:	30M		

Remote

Remote Holder

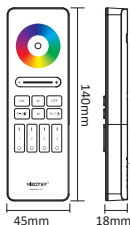

Function

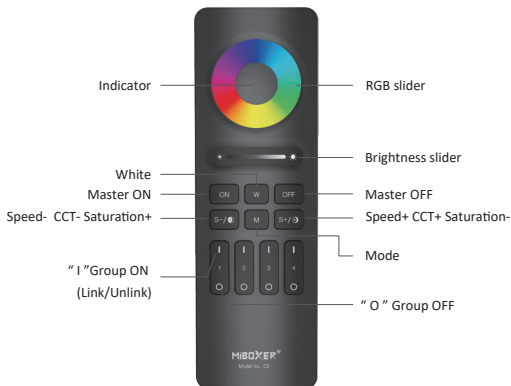 

Function

White:



For white color

Dynamic Mode:



Press continuously to
change different mode

RGB Ring:



Change RGB color

Group ON (Link/Unlink):

For different zones



"I" ON(Link/Unlink) "O" OFF

Brightness slider:



Dim brightness

Multi Function:

Speed-/ CCT-/ Saturation+



For dynamic mode, speed-

For white mode, CCT-

For RGB mode, saturation+

Multi Function:

Speed+/ CCT+/ Saturation-



For dynamic mode, speed+

 
For white mode, CCT+

For RGB mode, saturation-

Link/Unlink

Link


controller must link with remote before using it

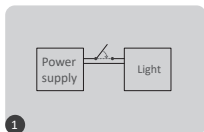

turn off light 10 seconds and turn on again



 short press "ON" 3 times within 3 seconds

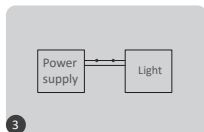


link is done once light flashes 3 times slowly



Link is failed if light doesn't flash, please repeat above steps
(Attention: can not link again if remote already finished linking)

 
Unlink

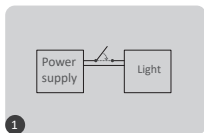

turn off light 10 seconds and turn on again



 short press "ON" 5 times within 3 seconds

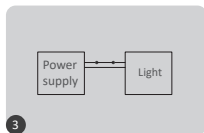


link is done once light flashes 10 times quickly



Unlink is failed if light doesn't flash, please repeat above steps
(Attention: no need to unlink if the light never be linked)

 Installation



Remove the sticker on the holder



Stick the holder on the wall and
put remote on the holder

Attention:

1. Don't use it in humidity or high temperature area, please take out battery if don't use it frequently and keep it in dry or static electricity area
2. Don't use it near metal or strong magnetic area, it will affect signal and lost distance.



中国制造