

RF 4 Channel LED Remote Controller

1. Technical Parameters (Remote Control)

Power Supply : 2 x AAA Batteries


2. Technical Parameters (Receiver)

Working Voltage: DC 12V-24V

Control Current : 6A/circuit

Receiving Range : 30 metres

Grouping: You can add endless numbers of receivers to a zone on the 4 channel remote control making you completely flexible in creating different combinations.

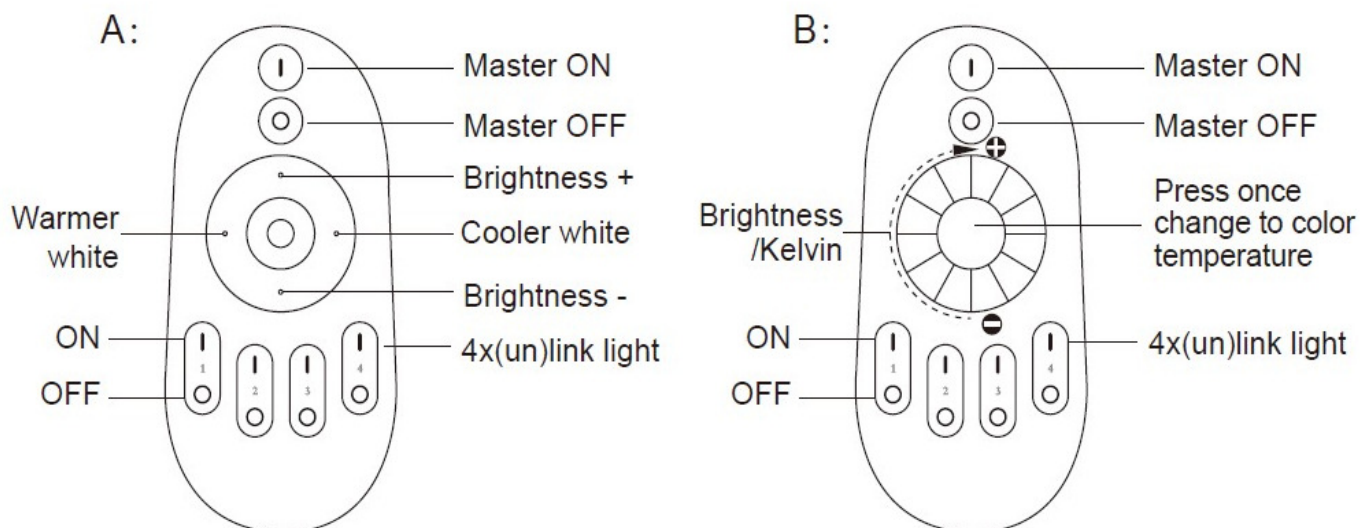

Linking Lights to Remote Zones

Linking a Receiver to the Remote

1. Switch off the main power supply to the light
2. Restore power and within 3 seconds, choosing one of the "Zone On" (I) buttons, press the button until the light begins flashing. It will flash 3 times, indicating that the receiver is now linked to that numbered zone and can be controlled via the remote.

Activating a Zone

To activate a specific zone, depress the "Zone On" (I) button. The zone is now active and commands will only affect lights linked to that zone.

Unlinking a Light to the Remote

1. Check which zone the receiver is linked to. This can be done by testing the Zone On/Off controls for each zone on the remote control.
2. Switch off the main power supply to the light, by unplugging the receiver from the driver or by turning off the power at the light switch.
3. Restore power and within 3 seconds, press one of the "Zone On" (I) buttons 5 times or until the light flashes 10 times, indicating that the light has been unlinked.

Night Light mode: Hold either the Master Off or Zone Off buttons. The lights will now consume 0.4watts only

Further info: For further instructions on how to set up the 4 zone remote and receivers please refer to the videos section on our Website <http://www.sycamorelightingltd.co.uk/videos/>